



Assemble A & G as shown with C facing up. C must be removed then then reinstalled. Hand tighten only.

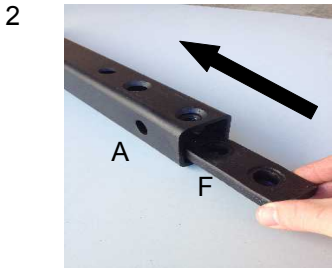

Steps 2 & 3 for reference only. Should already be assembled. Insert F into A and line up holes.

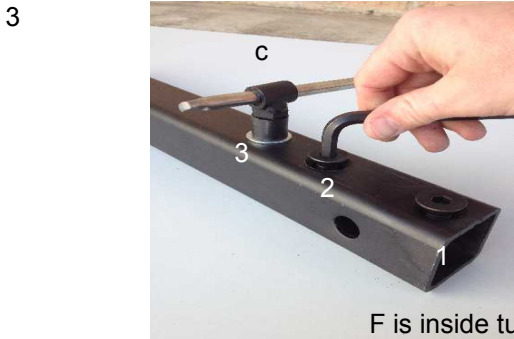



F is inside tube

With C fully tightened the screw in hole 2 should be sticking up about 1/4 of an inch. Loosen C to make the screw in hole 2 drop down & allow it to slide into the receiver. Adjust screw in hole 1 up or down to allow it to slide in & out of the receiver easily but tight enough to take out the slack.


TRUCK ADAPTER

PARTS LIST

- A. Receiver base shaft
- B. 1/2" x 1" bolts x 4
- C. Slip handle
- D. Bent Clevis
- E. Pin clip
- F. Slack-n-ator nut plate
- G. Receiver base angle ext.
- H. Allen wrench
- I. Set screws x 2
- J. Washer
- K. Metal sleeve/bushing

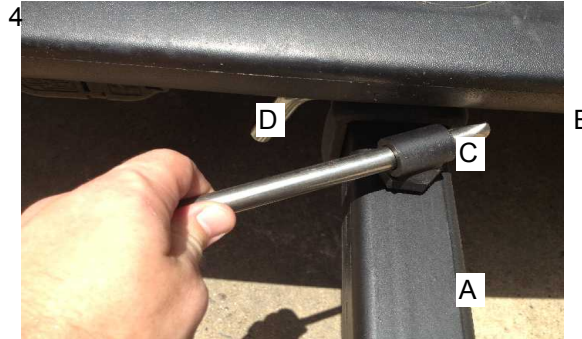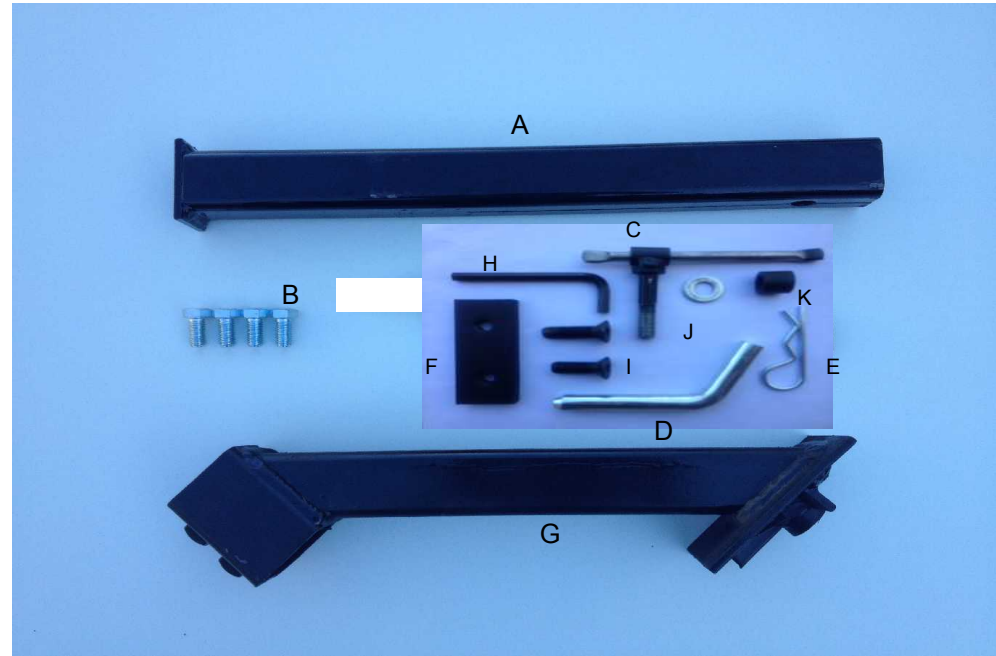

Install into the receiver of truck or ATV and secure with D and E then tighten C until hard to hand turn.

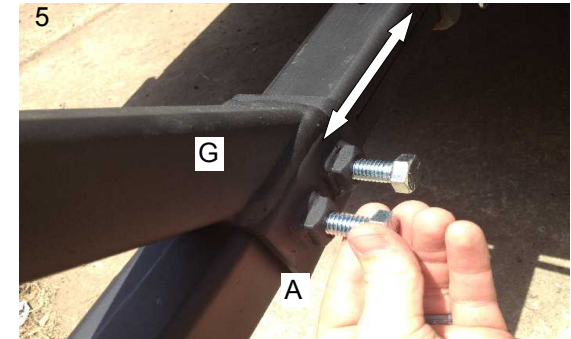

Move G along A to set the desired distance from the receiver then tighten bolts on G. Mount Deer Loader cradle to nut plate the same way as as shown on Deer Loader instructions for ATV.

Having trouble with assembly? You can call 800-809-4118 M-F 8-5 or 318-347-3524 any other time.

An instructional video will also soon be available at www.laguarddog.com.