


GUARD DOG INSTRUCTIONS

1

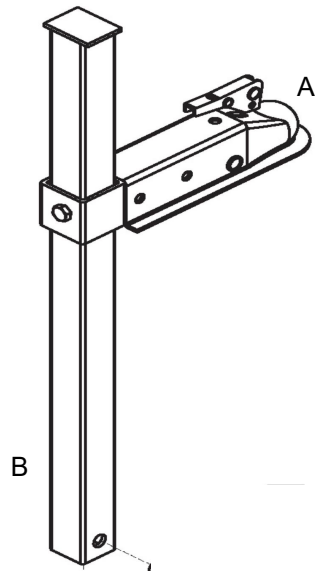


INSERT (B) INTO (A).
RAISE (A) TO TOP OF (B) THEN HAND
TIGHTEN 1 BOLT (H) AT REAR OF (A).

PARTS LIST

		QTY
A.	COUPLER HEAD	1
B.	COUPLER HEAD SHAFT 1 1/2"	1
C.	SAFETY CLEVIS(BENT PIN)	1
D.	COTTER PIN	1
E.	RECEIVER BASE ANGLE EXTENSION	1
F.	SLIP HANDLE	1
G.	RECEIVER BASE SHAFT 2"	1
H.	3/4" BOLTS	5


TOOLS NEEDED

3/4" WRENCH

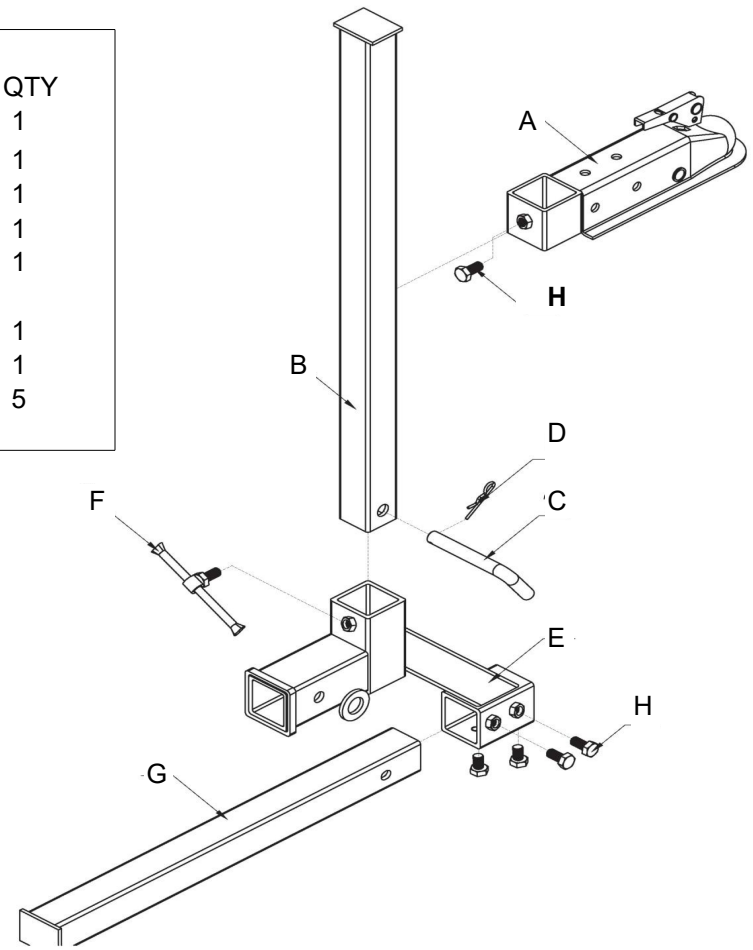

HAVING PROBLEMS WITH ASSEMBLY? YOU CAN CALL 800-809-4118 M-F 8-5.
A NEW INSTRUCTIONAL VIDEO WILL SOON BE AVAILABLE AT WWW.LAGUARDDOG.COM.

2

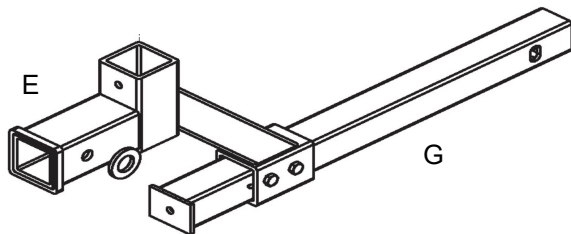


ASSEMBLE (E) TO (G) AS SHOWN. HAND
TIGHTEN 4 BOLTS (H) ONLY.

3

IMPORTANT NOTES...


IF YOUR MODEL CAME WITH A SLACKNATOR KIT YOU WOULD INSTALL IT AT THIS TIME.
IT WILL HAVE ITS OWN SET OF INSTRUCTIONS.
ANY MODELS PURCHASED FROM CABELAS DO NOT CURRENTLY COME WITH A
SLACKNATOR KIT THOUGH ONE CAN BE PURCHASED SEPARATELY AT
WWW.LAGUARDDOG.COM.

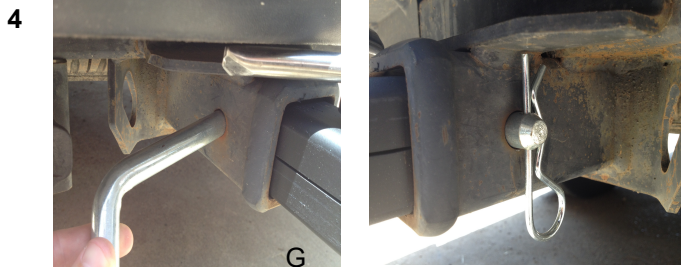


ALIGN HOLES IN (G) WITH HOLES IN TRUCK RECEIVER THEN INSTALL CLEVIS & COTTER PIN ENSURE COTTER PIN IS SECURED PROPERLY.





LOWER TAILGATE & ADJUST (E) LEAVING A 1" OR GREATER GAP BETWEEN (E) & TAILGATE.

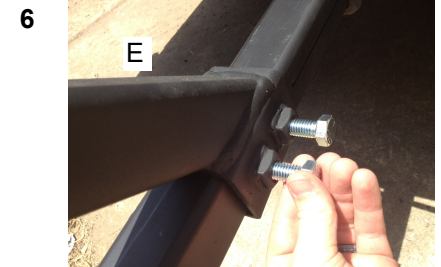


HAND TIGHTEN ALL BOLTS (H) IN (E). THEN SECURE WITH WRENCH ONE FULL REVOLUTION. DO NOT OVER TIGHTEN!!!

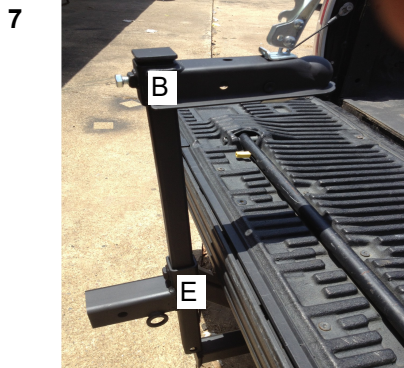



INSERT (B) INTO (E) & INSTALL (C), (D), & (F) DO NOT TIGHTEN (F).

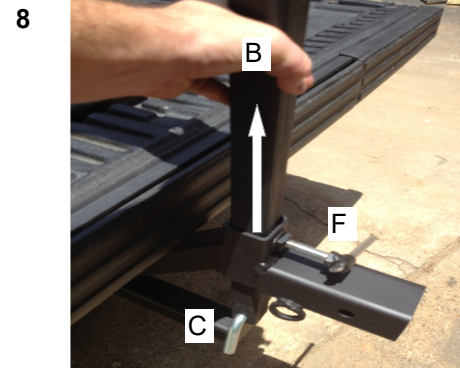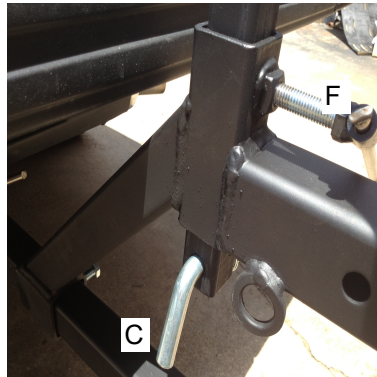

RAISE (B) UP UNTIL IT STOPS AGAINST (C) THEN LIGHTLY TIGHTEN (F) TO HOLD

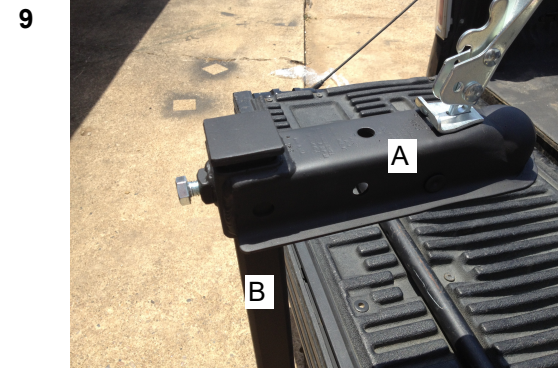

ATTACH (A) TO ATV HITCH BY MOVING IT DOWN (B) & TIGHTEN SET SCREW. NOTE: ONCE SET TO YOUR ATV DO NOT REMOVE SET SCREW.

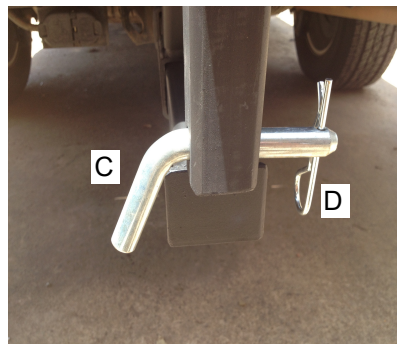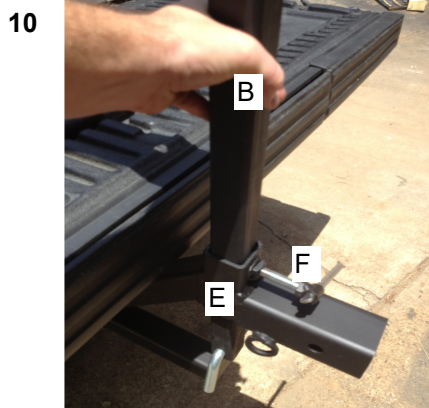

TO UNLOAD ATV, REMOVE COTTER PIN(D) & CLEVIS(C), LOOSEN SLIP HANDLE(F), & LIFT (B) OUT OF (E).

NOTE: RECEIVER BASE ANGLE EXTENSION(E) HAS A RECEIVER THAT CAN BE USED FOR TOWING

SPEC:
200 LB TONGUE WEIGHT
2,000 LB TOWING CAP.

MAINTENANCE:
CHECK BOLTS PERIODICALLY ON (E) AND (A) TO MAKE SURE THEY STAY TIGHT.

